



Front of cue card


Voice Commands


Talkman® sleep	Talkman continue
Talkman wakeup	Say again
Talkman noise sample	Talkman help
Talkman report problem <small>(Vocollect VoiceCatalyst® 1.2 and later)</small>	

Talkman Device Buttons

 Play/Pause – turns device on/off, wake/sleep

 Plus – raises volume, scrolls through menu – A to Z

 Minus – lowers volume, scrolls through menu – Z to A

 Operator – launches a spoken menu, confirms selections

Speed/Pitch/Speaker

Press Operator button first then + or – until device says:

Change speed – makes voice faster or slower

Change pitch – makes voice higher or lower

Change speaker – selects male or female voice


©Copyright 2015 Honeywell International Inc. All rights reserved.


PN: 1004112A

V. 2


Back of cue card


Talkman Device LEDs


 Solid/small segment on — device is on
Blinking/small segment pulsing — device is sleeping


 Solid/rotating ring — device is turning off or device is loading

Do not remove battery, turn off power, or place in charger at this time

 Rotating ring (A700 only) — starting up or loading/changing operator, task, or voice

 Network LED
Pulse – connected to WLAN
Fast blink – trying to connect to WLAN

 Bluetooth®
Fast blink – looking for a pairing
Pulse – paired to device

 NFC LED (A700 only)
Fast blink – scanning for a tag
Slow pulse – readable

Honeywell

Front of cue card

Action Required If...

Device has difficulty hearing/understanding

1. Make sure the microphone is covered with a windscreen.
2. Check position of microphone.
3. Take a noise sample.
4. Retrain word.

Trouble logging on

1. Ensure correct operator is selected.
2. Ensure correct headset is connected/paired.
3. Have management check for host/WLAN/network issues.

No sound through headset

1. Check battery for full charge.
2. Ensure headset is properly connected/paired.
3. Turn the device off then back on.
4. Test by switching to another working device.

Unable to hear device clearly

1. Ensure headset is properly connected/paired.
2. Ensure headset is in the proper position.
3. Adjust the volume.

Adjust The:

Volume if you want the device to speaker louder or softer.

Speed if you want the device to speak faster or slower.

Pitch if you want the device to speak higher or softer.

Honeywell

PN: 1004113A

Back of cue card

Start Shift

1. Determine device to be used.
2. Determine charge state of device battery.
3. Remove device from charger.
4. Change to a fully charged battery if necessary.
5. For wireless headsets, pair the devices.
6. Mount device on holster/clip/harness.
7. Put on headset.
8. For wired headsets, connect headset to the device.
9. Wake up device.
10. Load operator.
11. Complete noise sample.

Finish Shift

Do not turn off if LED is blinking red.

1. Perform sign off.
2. Press and hold Play/Pause button until LED is red.
3. Remove device from device holster/clip/harness.
4. For wired headsets, disconnect headset. For wireless headsets, break pairing. Press + & — on the headset.
5. Remove headset.
6. For A500 and A720, wipe contacts as needed.
7. Remove windscreen/microphone cap/ear pad from headset and clean as needed.
8. Insert device into a charger making sure the device is seated properly. For A700 the battery indicator light on the device will turn yellow. For A500 the LED status on the charger will turn red.

©Copyright 2015 Honeywell International Inc. All rights reserved.