 


START A SHIFT - PREPARE BELT

 
1. Open belt

Release Velcro®
... and slide belt out of
buckle clip

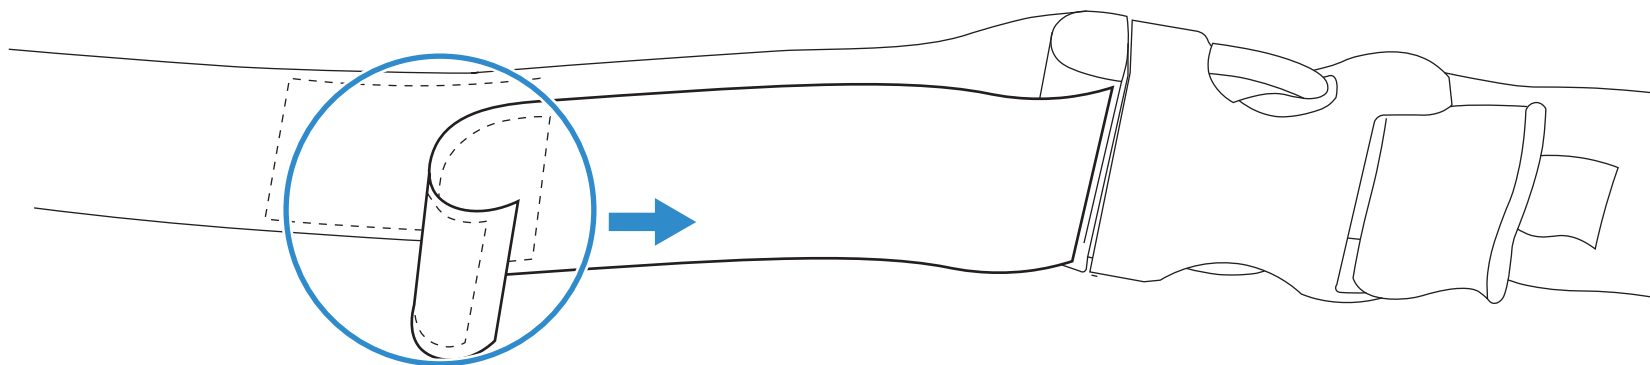


2. Slide the holster onto the belt

Talkman A730 holster
OR
Talkman A710 or A720 holster

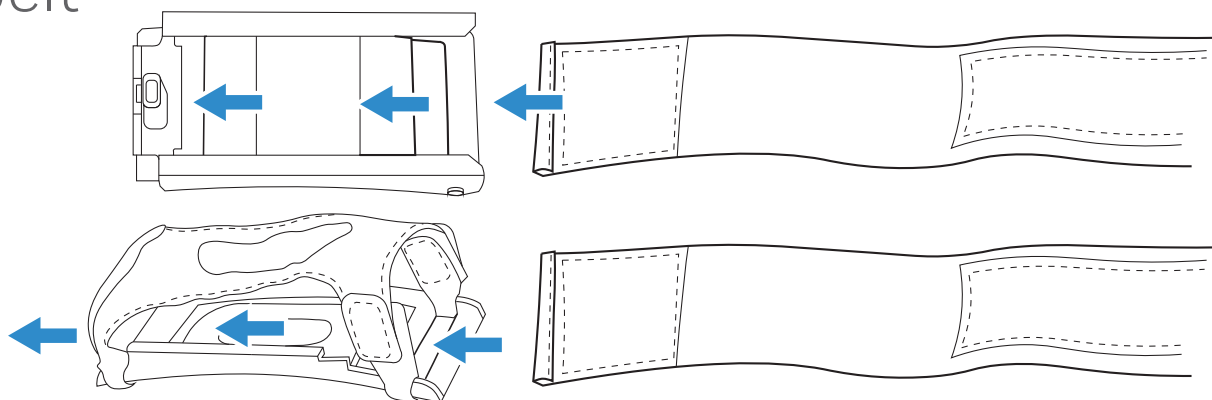


3. Close belt

 Feed belt back through buckle
... and close Velcro®

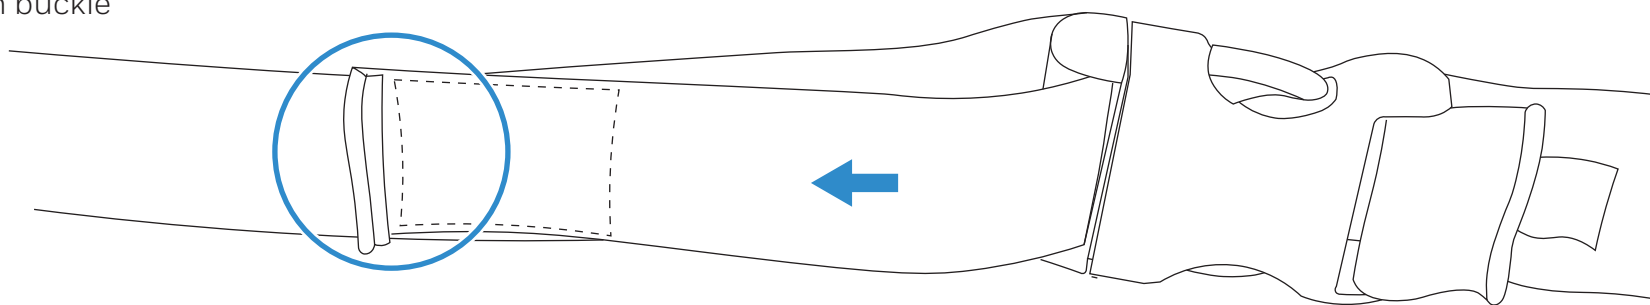


4. Put on belt

 Release buckle,
wrap belt around waist
and click buckle ends together

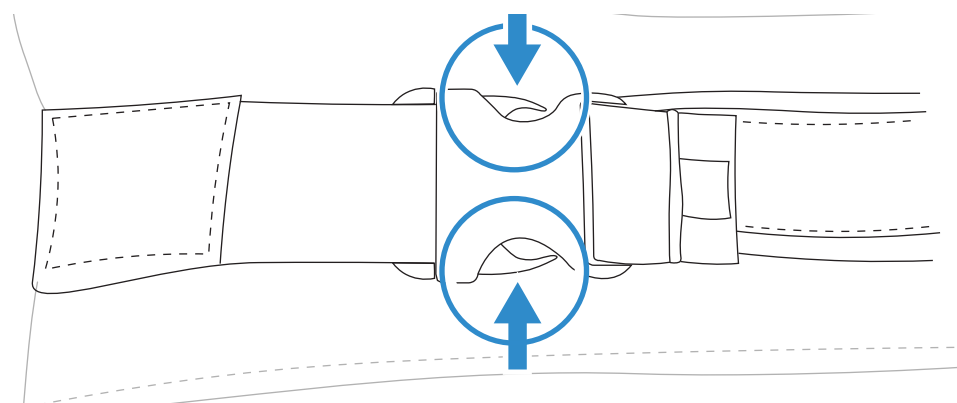


 5. Slide device into holster

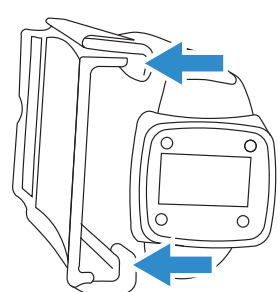

Talkman A730

 Align device slot runners with
holster and slide until click

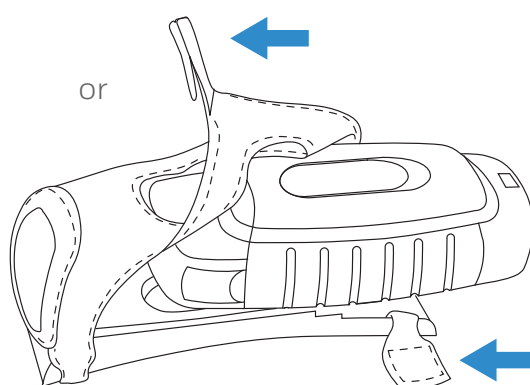


or

Talkman A710 or A720


Adjust Velcro,
slide in device
and fasten Velcro

START A SHIFT - WIRELESS HEADSET

 
6. Select device

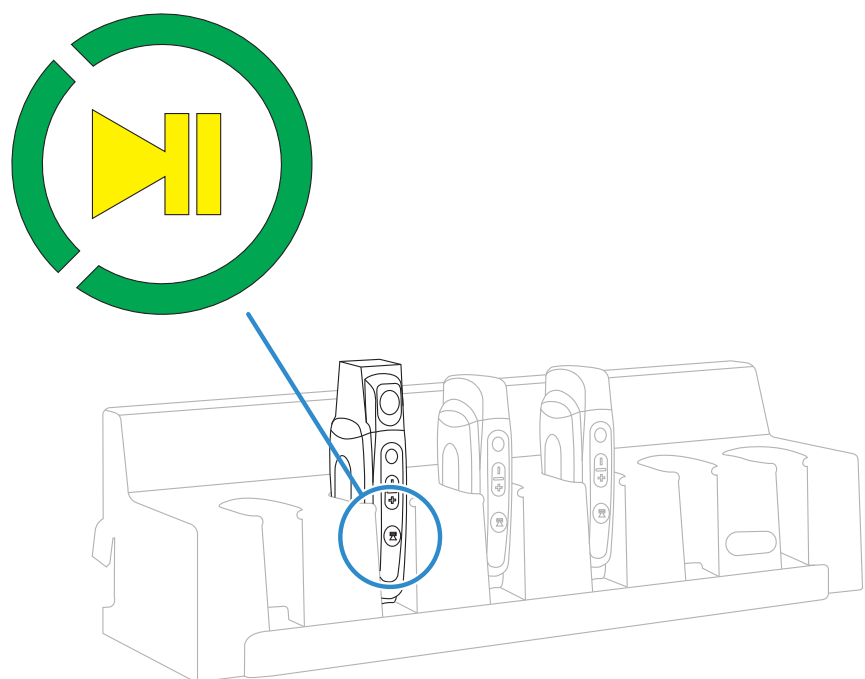


 
7. Power on SRX2

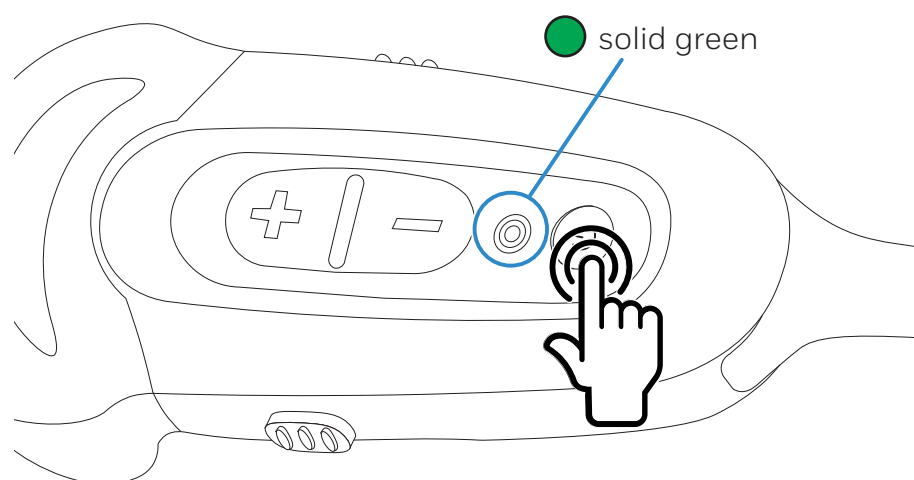

8. Touch electronic module to device at © symbol

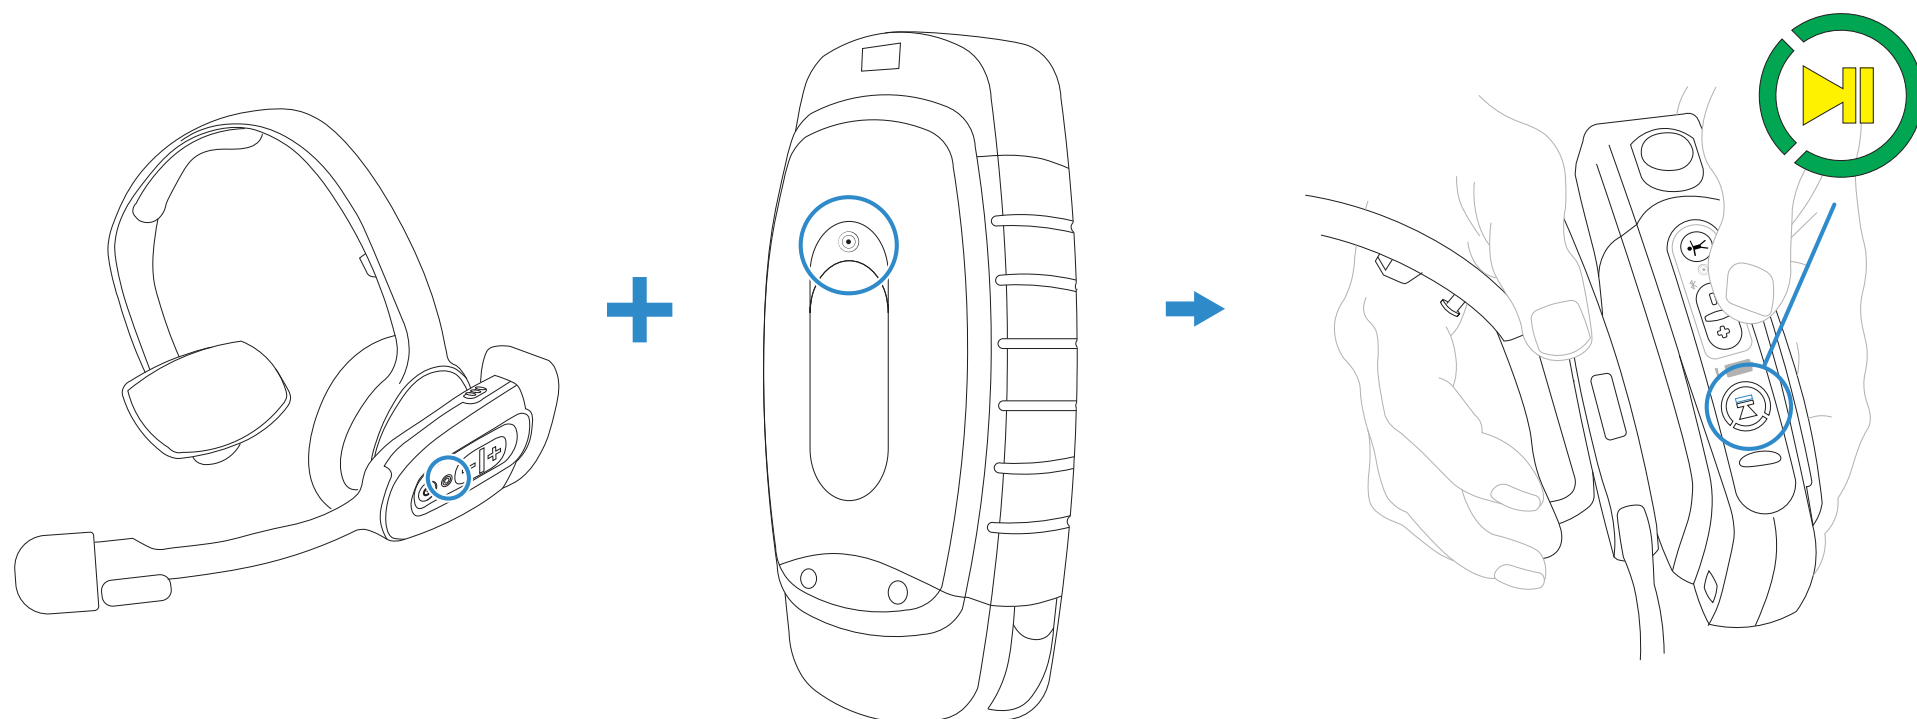


9. Put on headset and position microphone

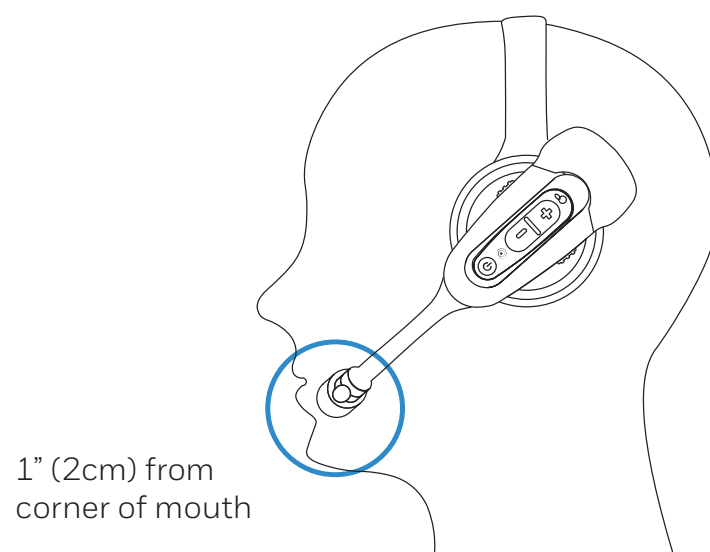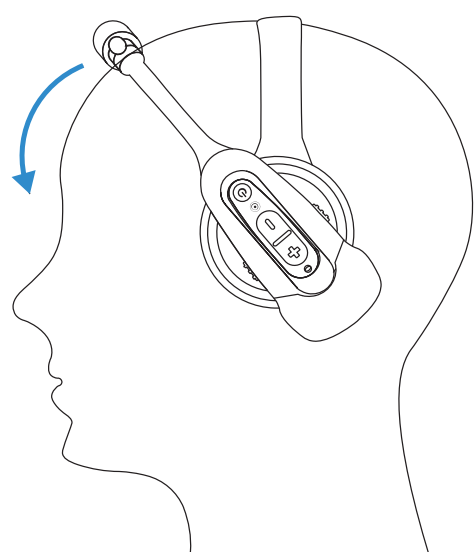


START A SHIFT - WIRELESS HEADSET


6. Select device

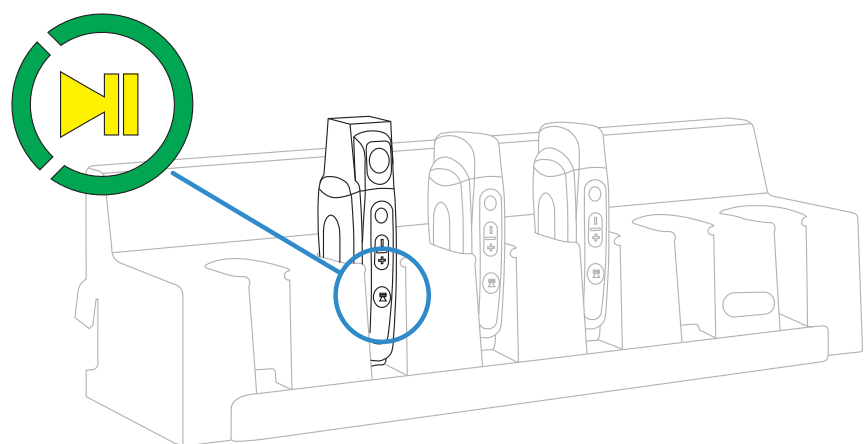

 
7. Power on SRX device

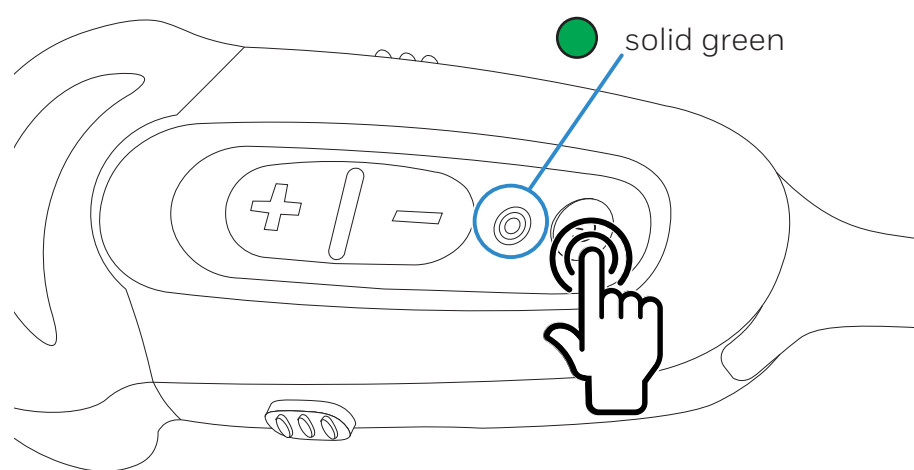

 
8. Touch headband to device at  symbol

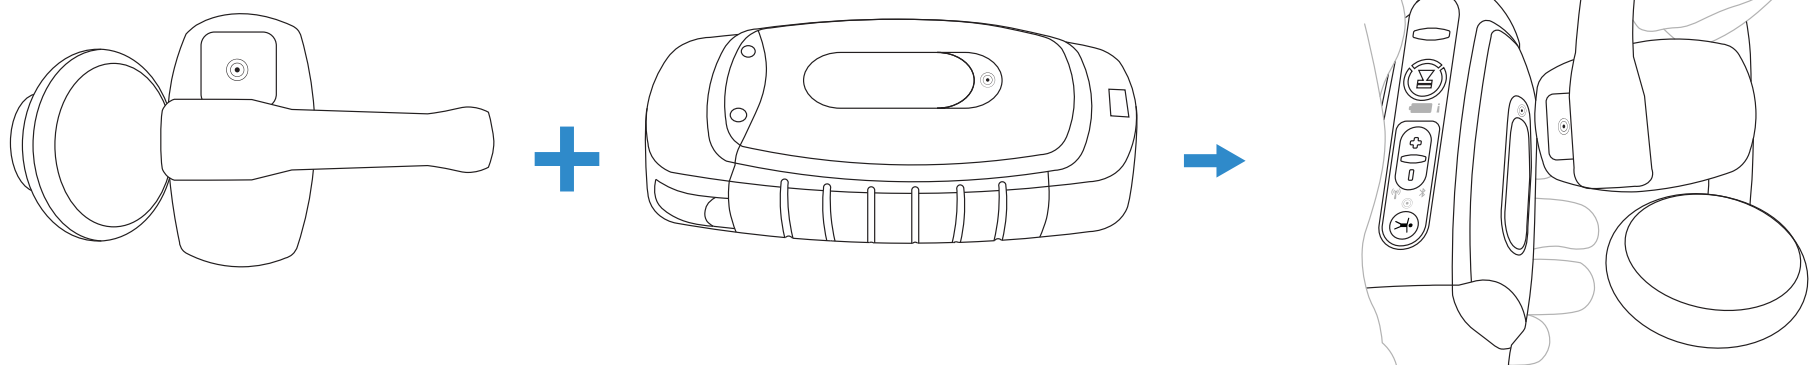

 9. Touch electronic module to device at  symbol

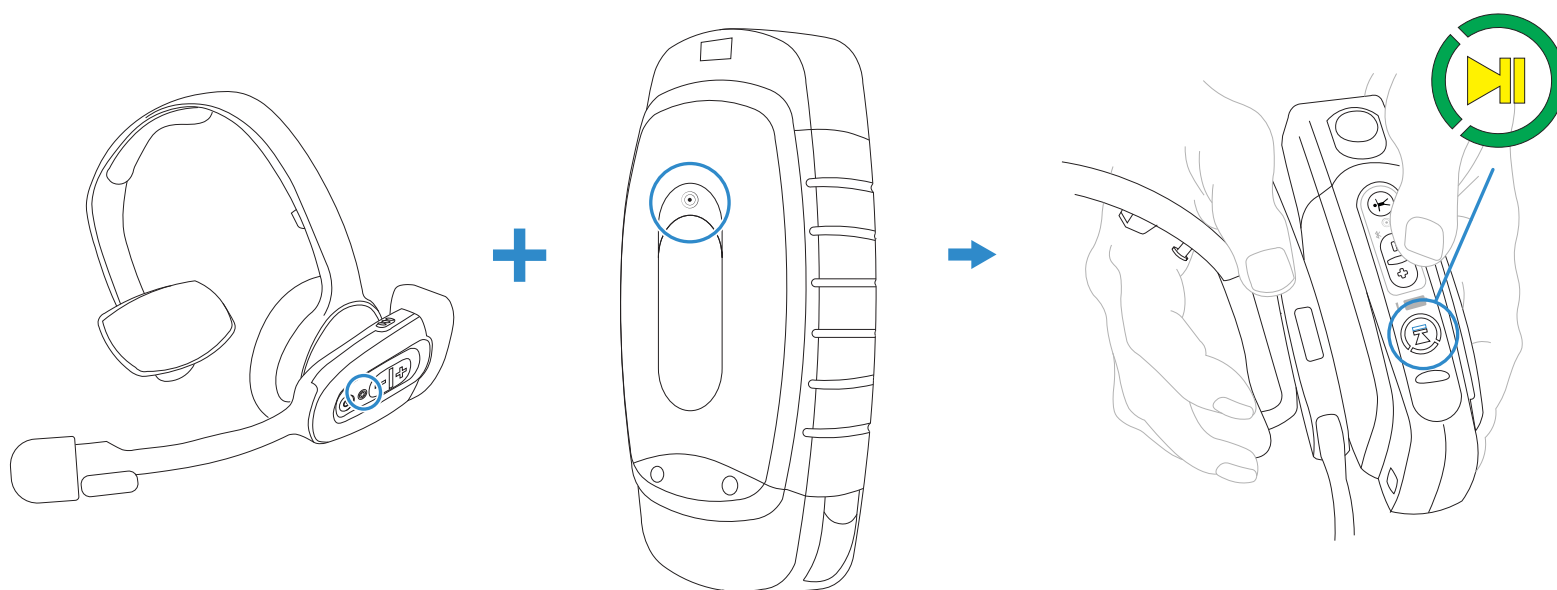


10. Put on headset and position microphone

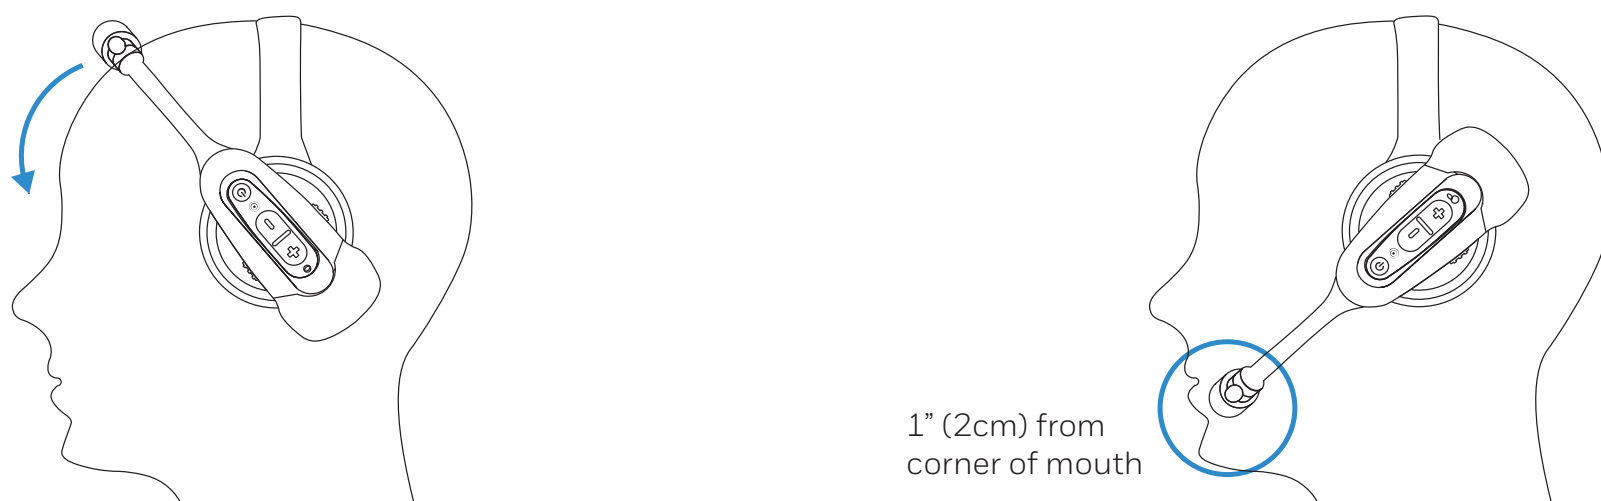


START A SHIFT - WIRED HEADSET


6. Select device

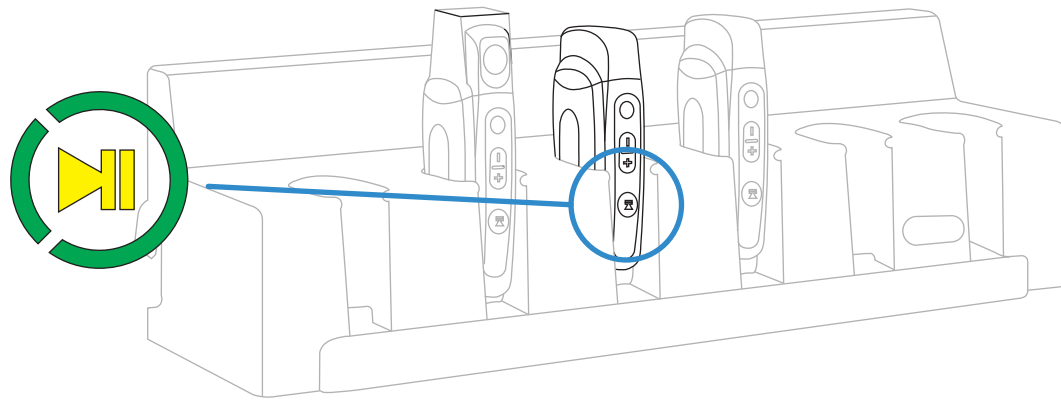

 
7. Put on headset and position microphone

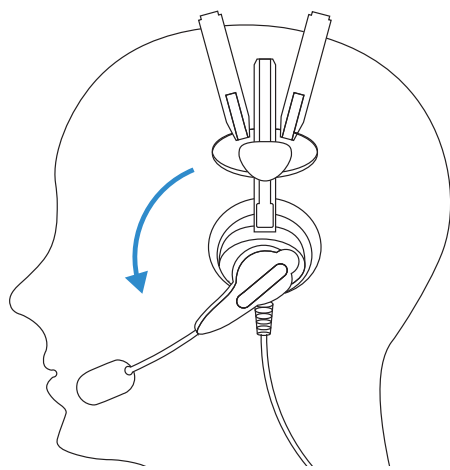


1" (2cm) from
corner of mouth

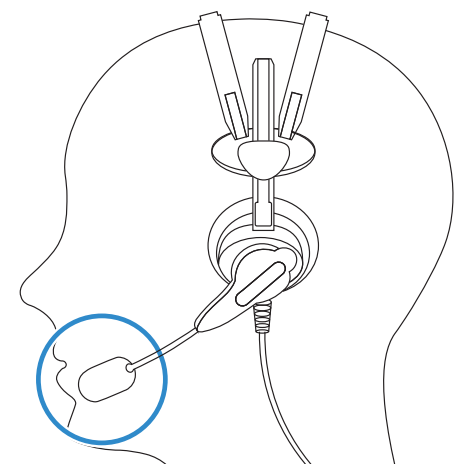 

 
8. Fasten cable clips

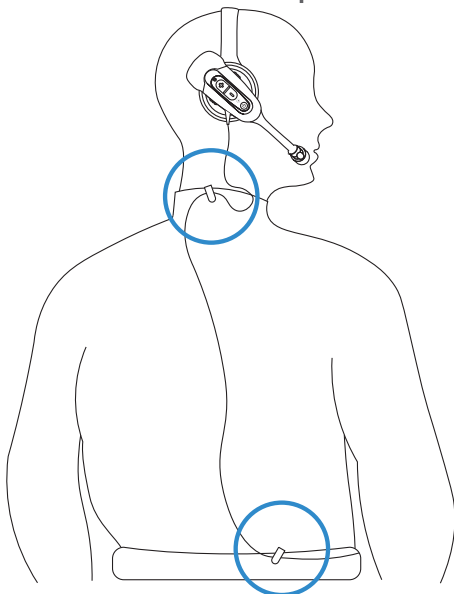

9. Match port colors

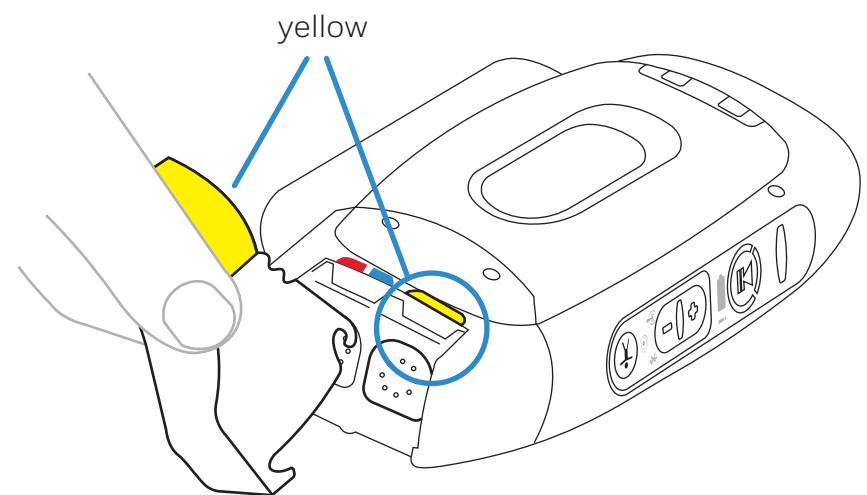


10. Tilt connector toward device until it clicks

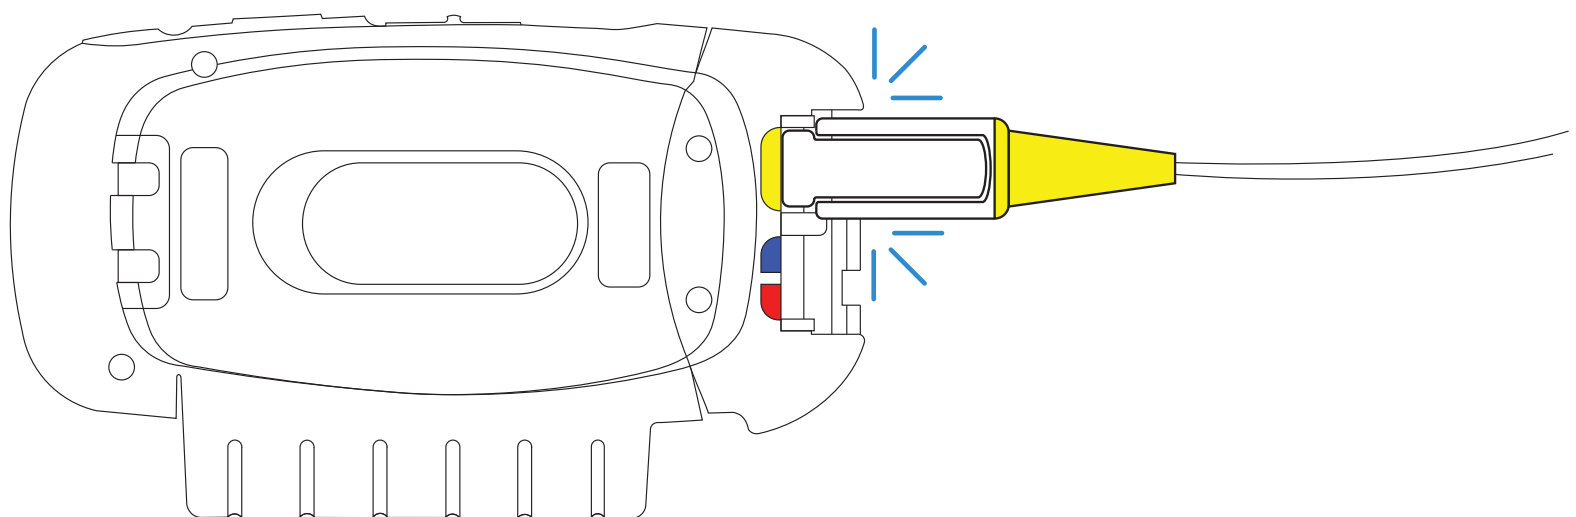


START A SHIFT - SIGN ON

 11. Power on device

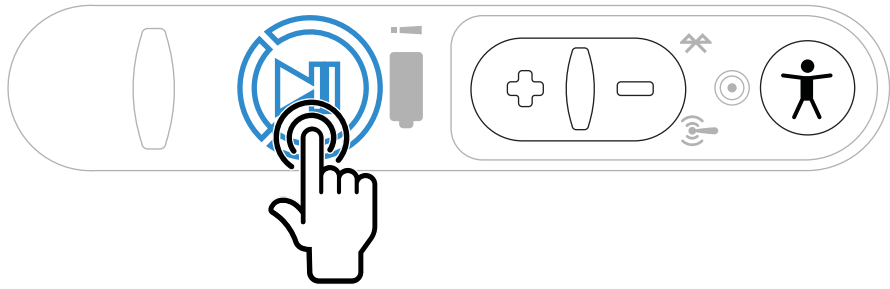


12. Press Operator

 Confirm operator name

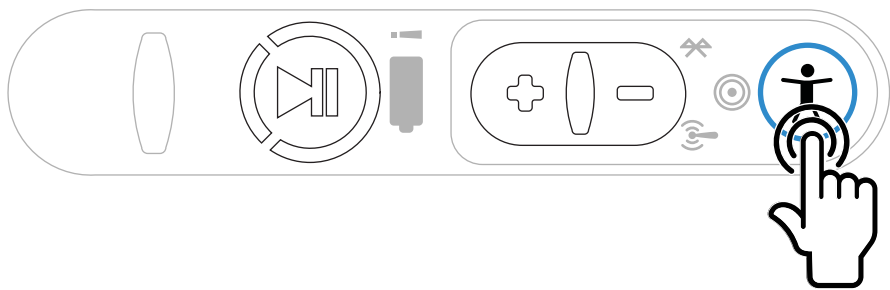


13. Press Play/Pause

 Power on device

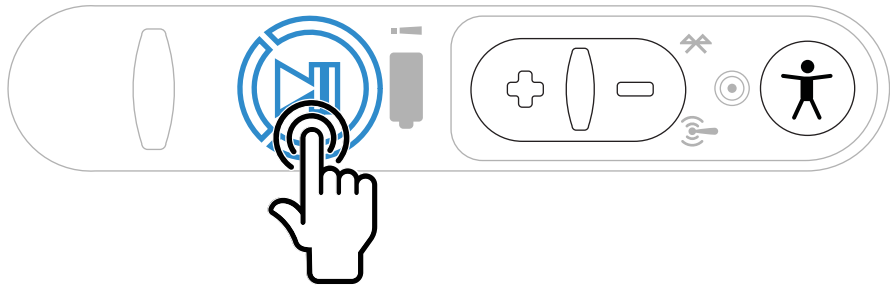

14. Do a noise sample

 0, 1, 2, Ready.

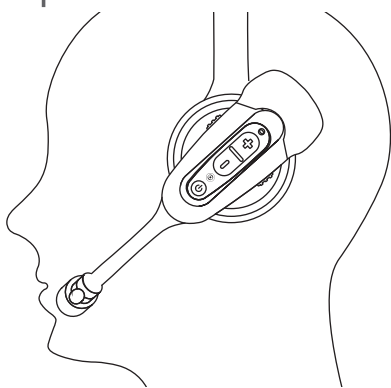


IF NEEDED. Change operator


Press Operator button



 
Press + or - until "Change Operator"

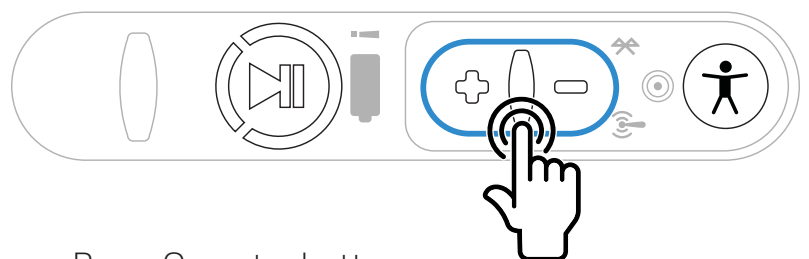


Press Operator button

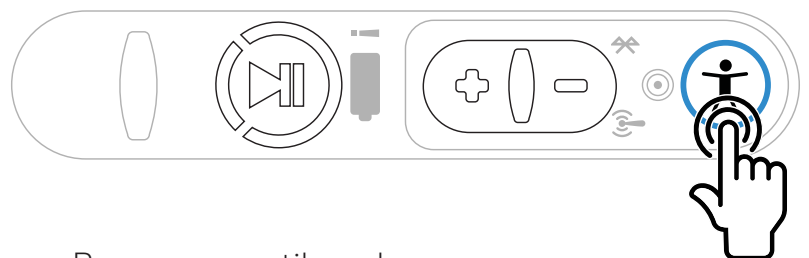

Press + or - until you hear your name

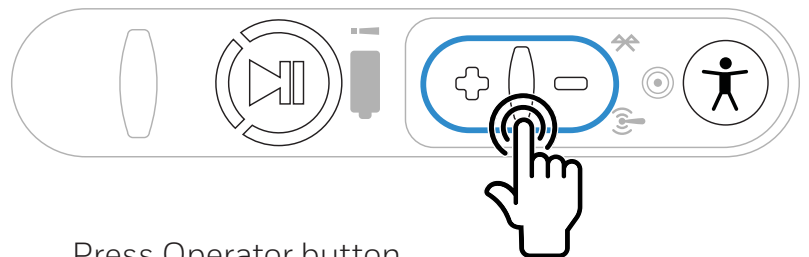


Press Operator button

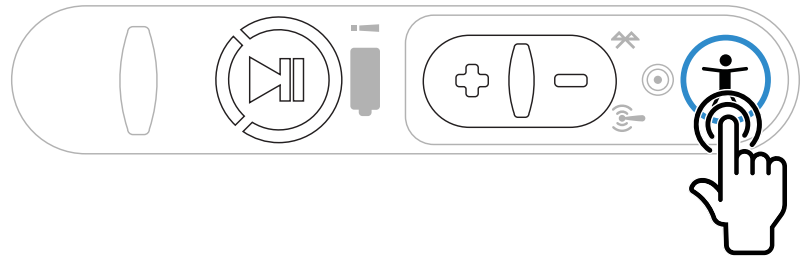 


15. Confirm readiness

Ready.

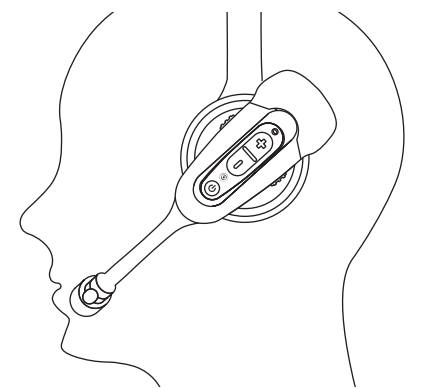

 
16. Say and confirm password

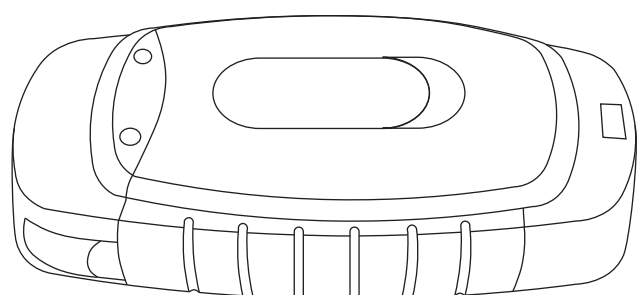

Password?

Correct?


Yes.

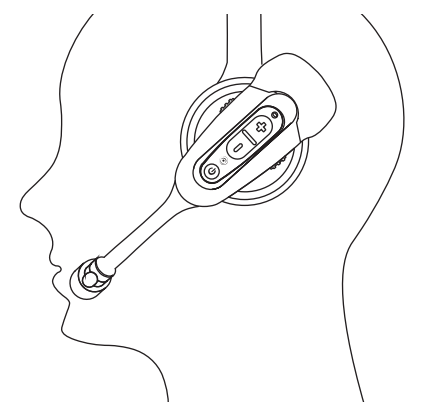


ADJUST FEATURES

TIP. Press the Play/Pause button at any time to cancel the action


1. Access the menu

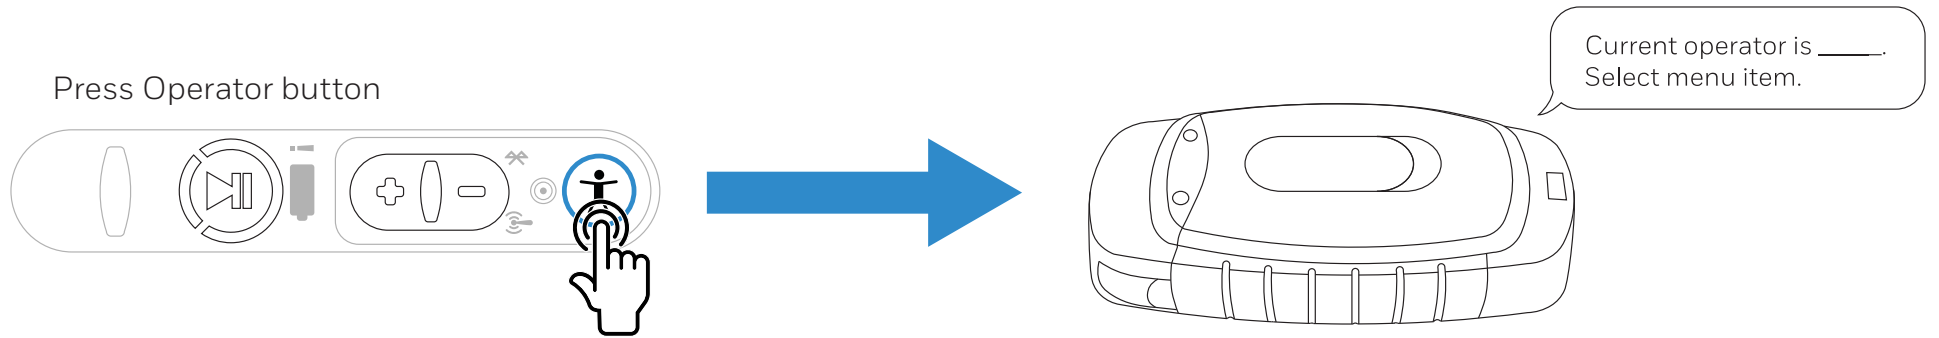


2. Press + or - button until desired menu item

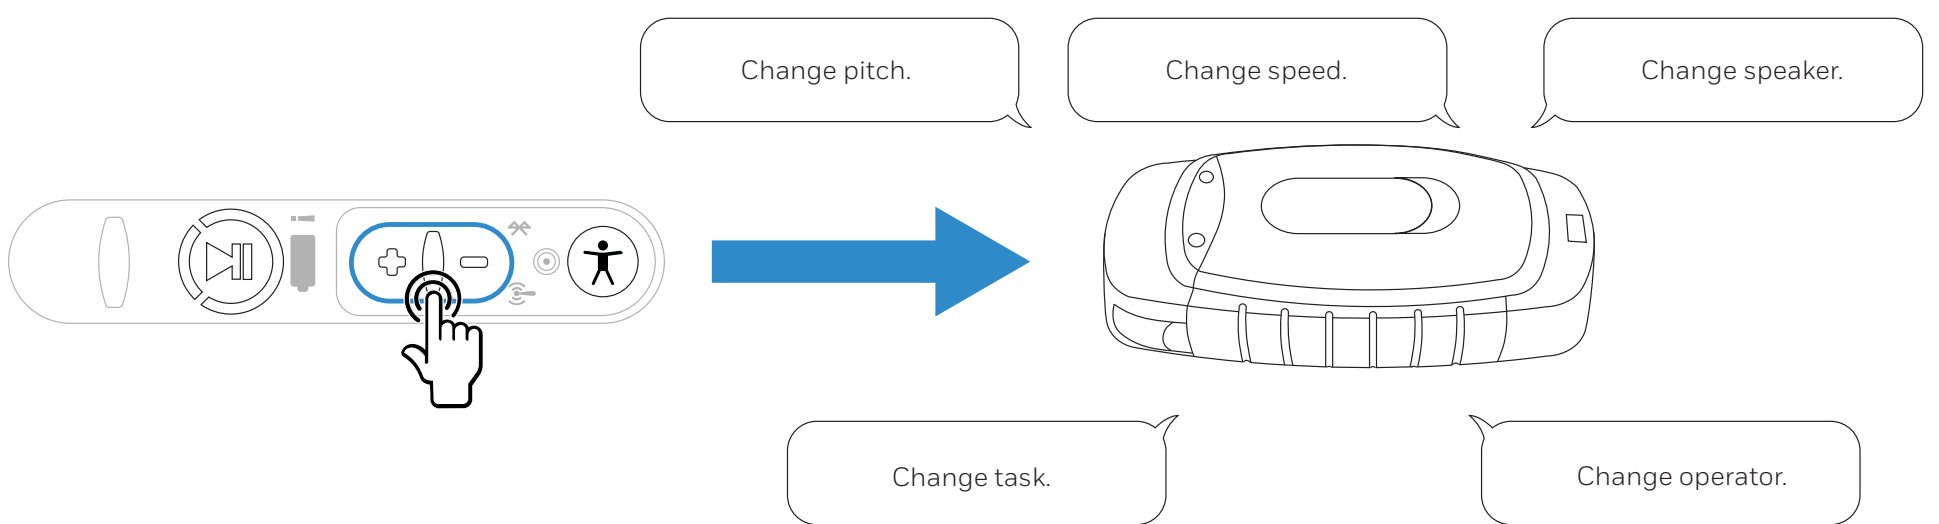

 
3. Press Operator button to select menu item

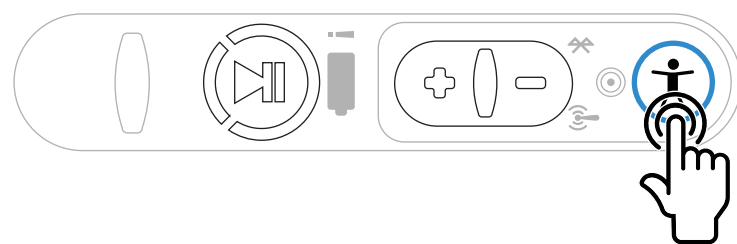

 4. Press + or - button until feature is adjusted

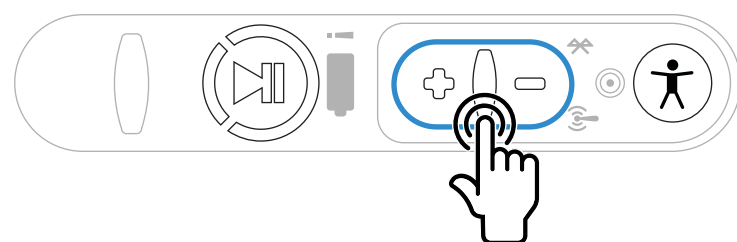


5. Press Operator button to confirm

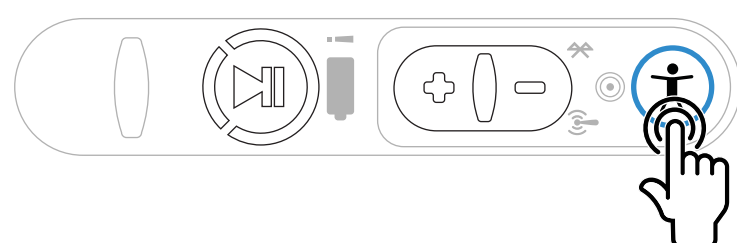


DEVICE STATE INDICATORS

 
1. Device state indicator - out of device charger

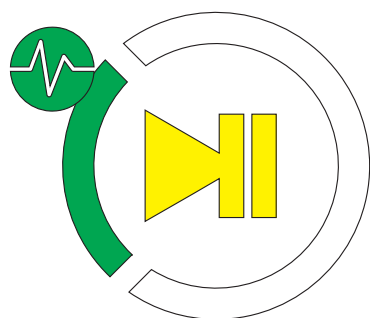



small segment
green & pulsing:
sleeping

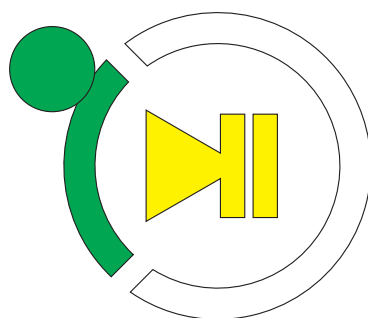 


small segment
green & solid:
on

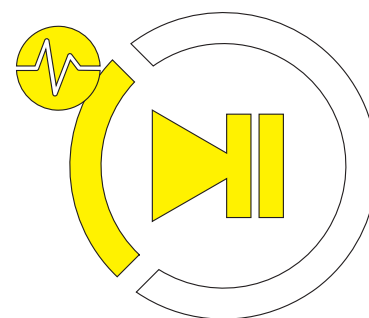 

  small segment
yellow & pulsing:
no task loaded

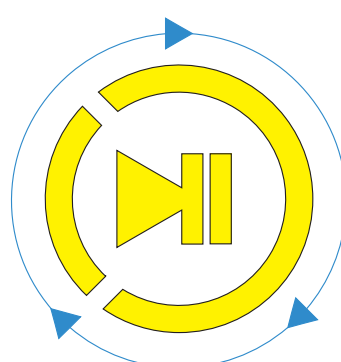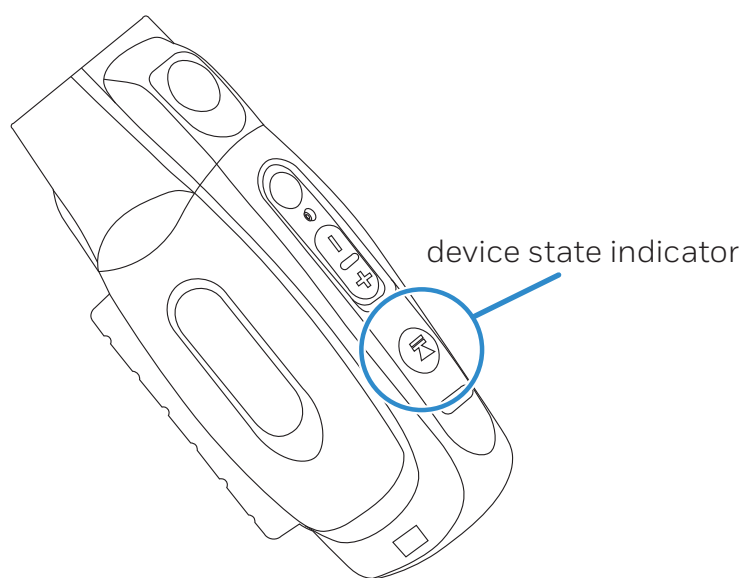


 entire ring
yellow & rotating:
loading or starting

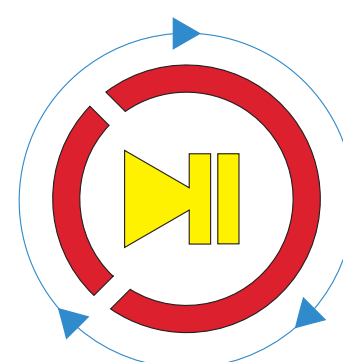


entire ring
red & rotating:
**loading software
or shutting down**

 
2. Device state indicator - in device charger

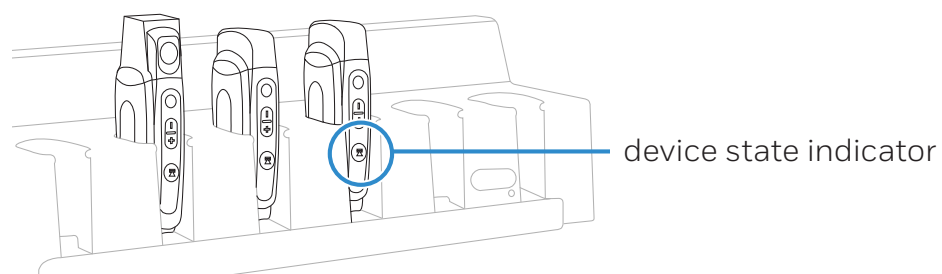

charging


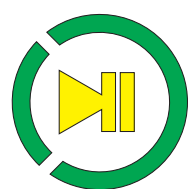 


charging complete

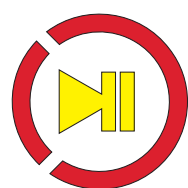 


charging fault

  
3. TouchConfig™

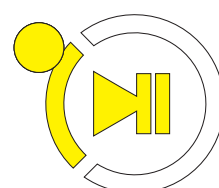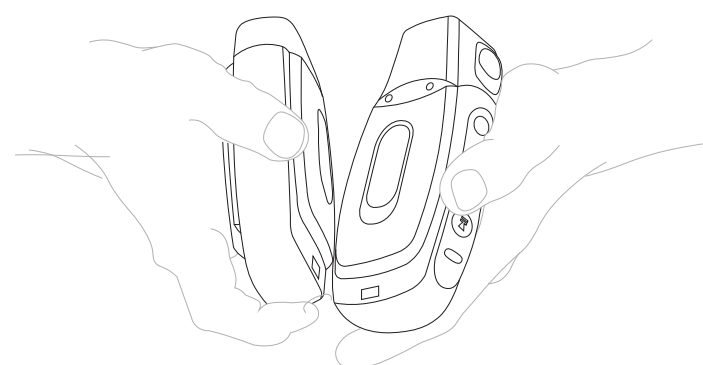

 small segment yellow & solid:
sender mode

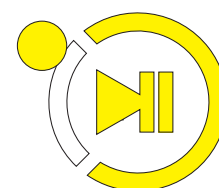

 
large segment yellow & solid:
receiver mode

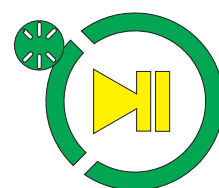


entire ring fast blink:
TouchConfig successful

CHANGE BATTERY


1. Slide battery release button away from battery

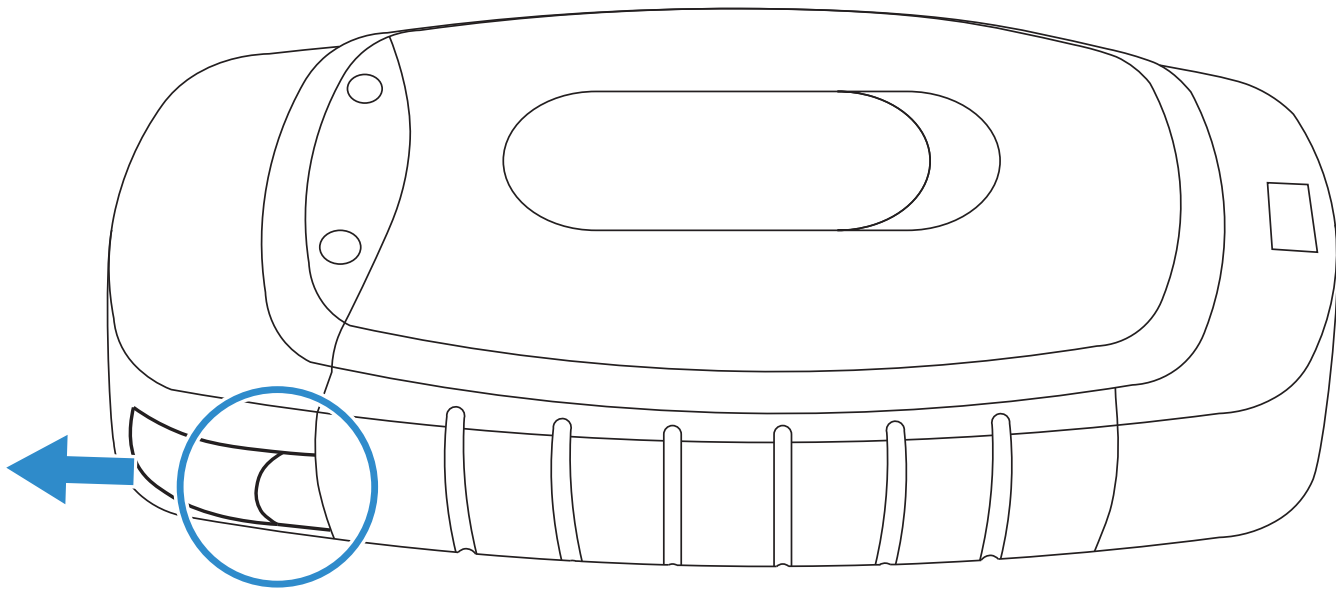

 
2. Lift out battery

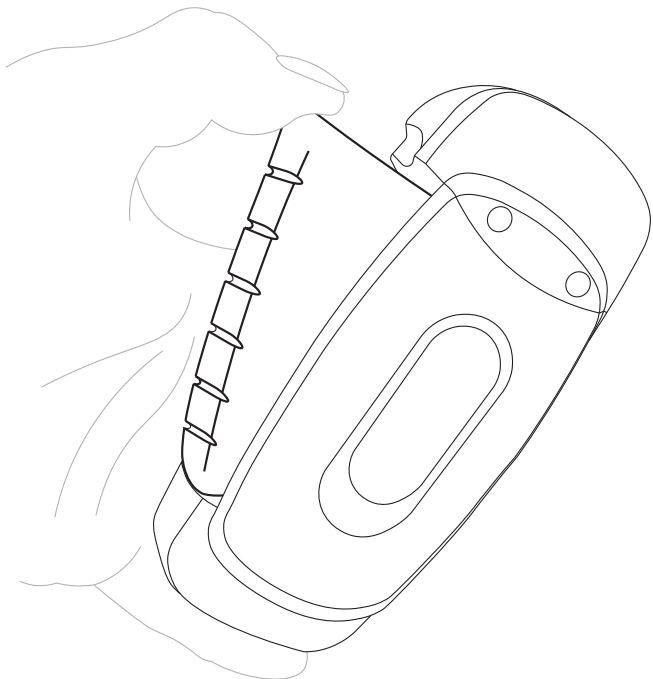

 
3. Place in empty slot

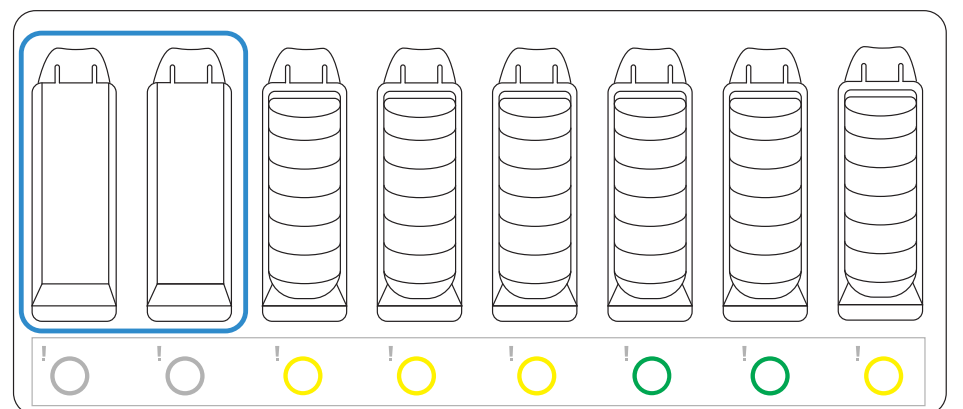

 4. Pick charged battery

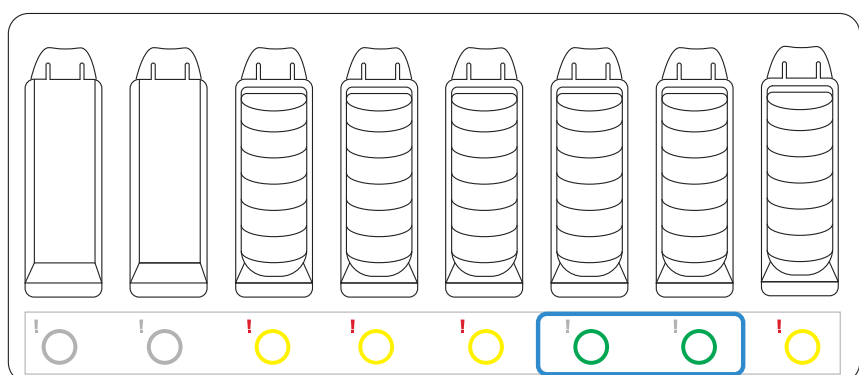

 
5. Insert pins-end first

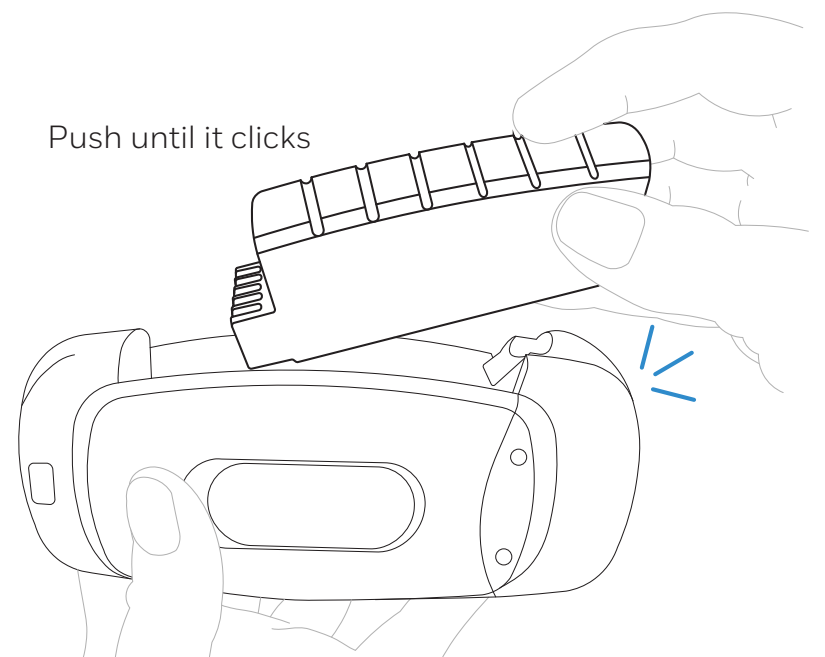

END A SHIFT - WIRED HEADSET


1. Power off device

 Press and hold Play/Pause until LED rotates red

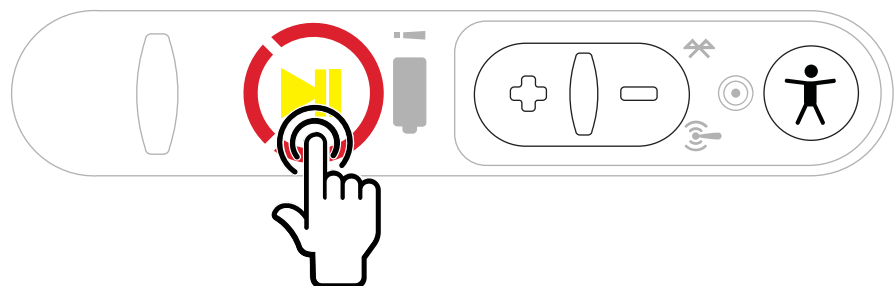


2. Remove connector

 Grasp connector, tilt bottom of connector away from device and lift up

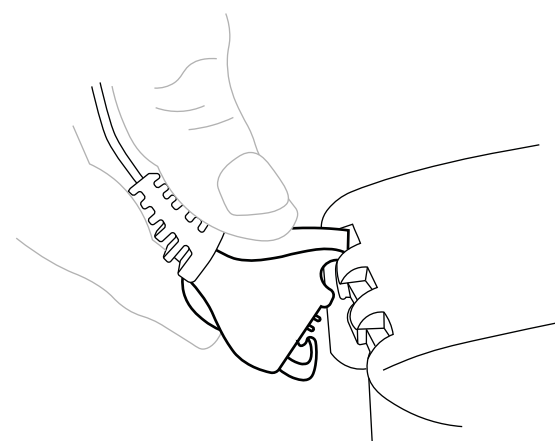

 
3. Slide out holster

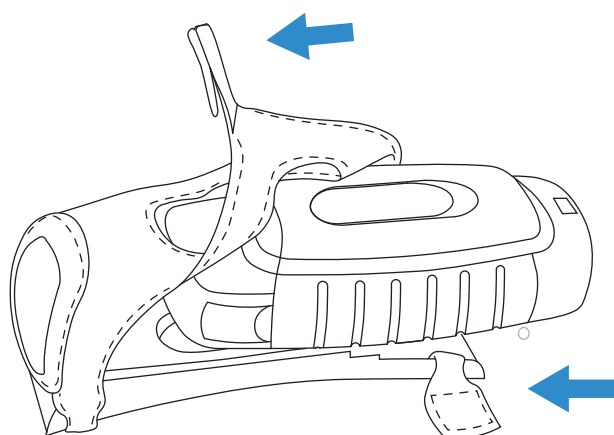


Open Velcro® and slide device out

4. Insert into slot

 
Insert device with button controls facing out and Operator button on top

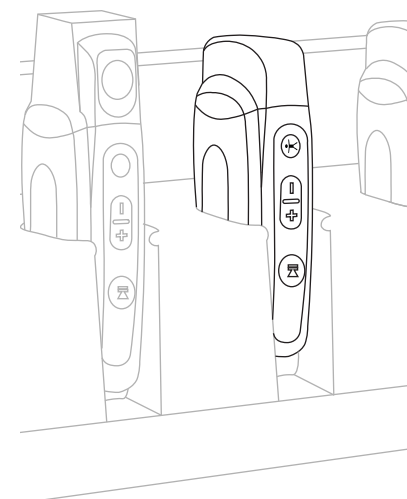

 5. Detach cable clips

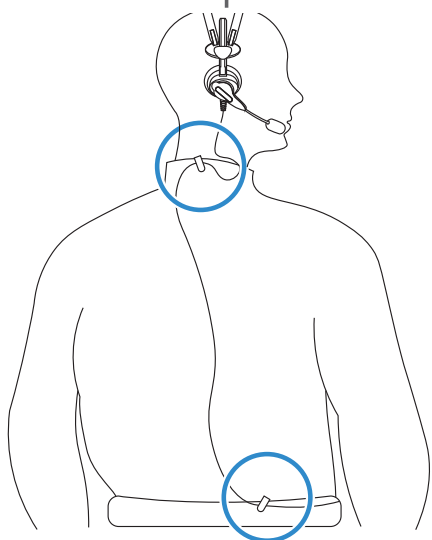


 6. Remove headset

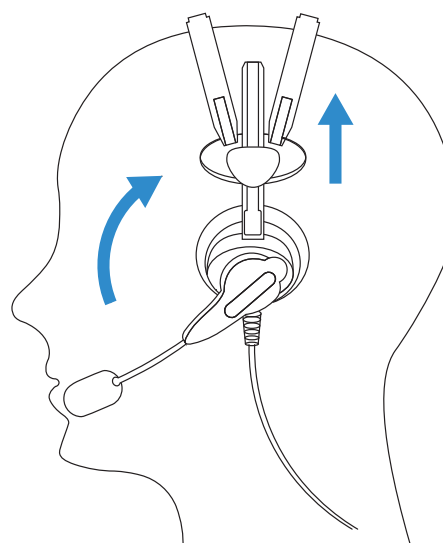

7. Remove belt

 
Release buckle

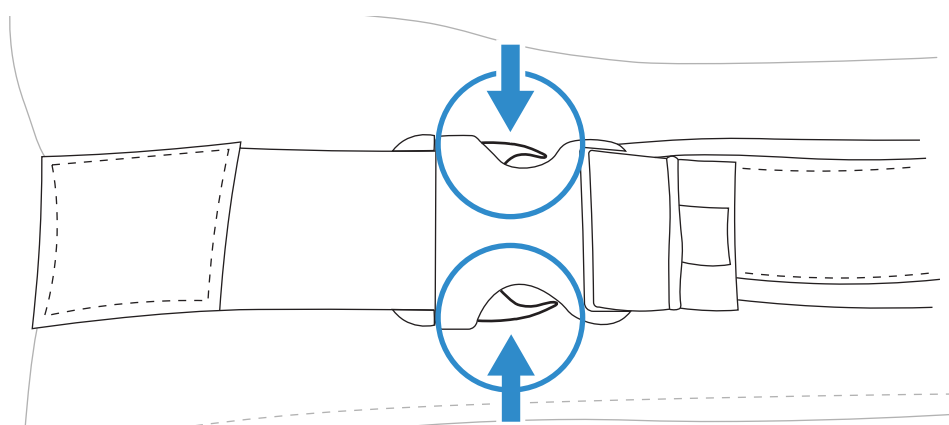


END A SHIFT - WIRELESS HEADSET

1. Power off device

 Press and hold
Play/Pause until
LED rotates red

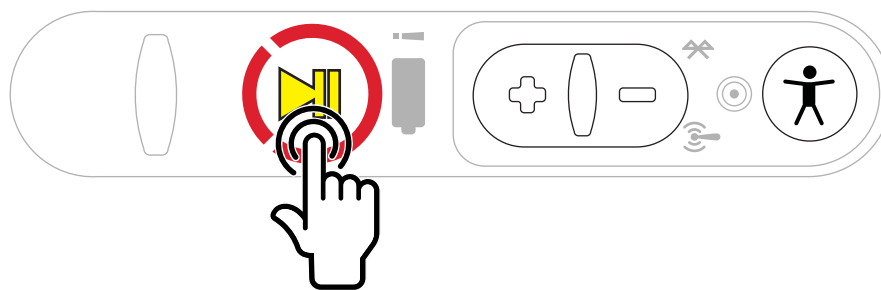


2. Slide device out of holster

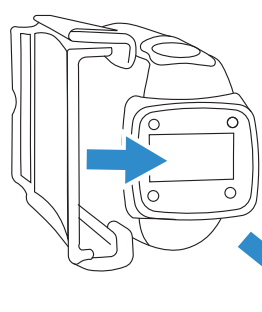

A730

Pull device away from
you, sliding along clip

 or

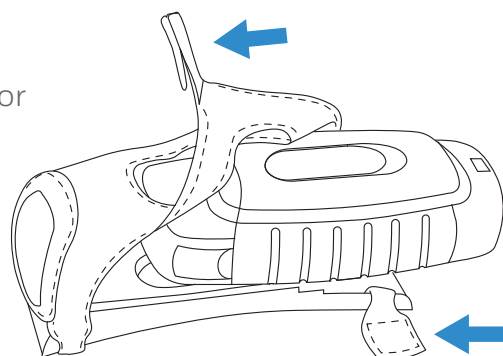


A710 or A720


Open Velcro® and slide
device out

3. Insert into slot

 Insert device with button
controls facing out and
Operator button on top

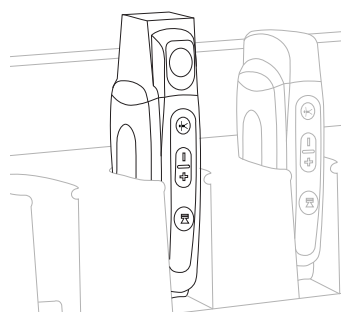


 4. Power off headset

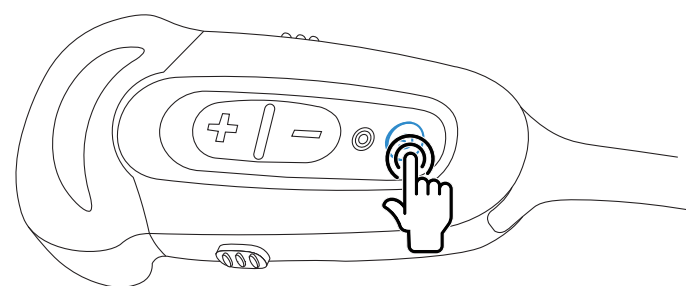


5. Remove battery

 Squeeze battery
release buttons

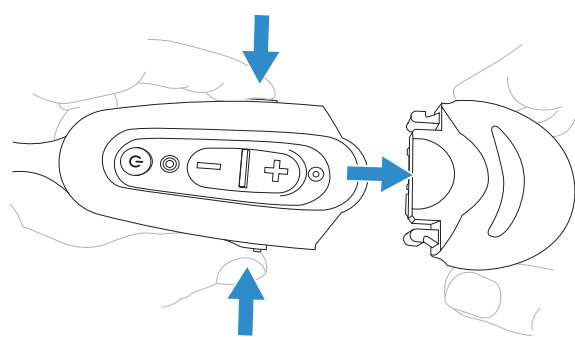

 6. Place in charger

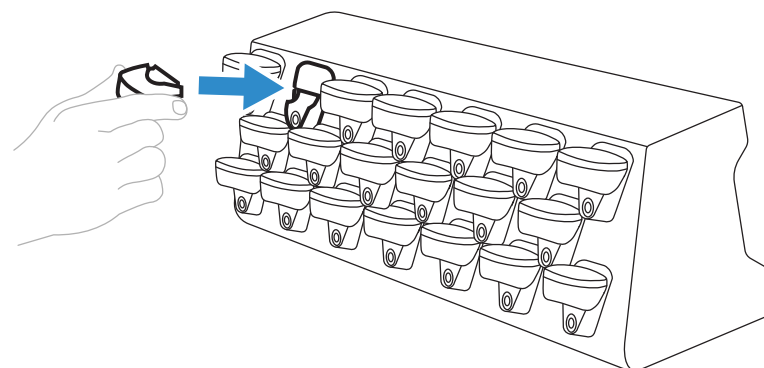

7. Remove belt

Release buckle

